California Environmental Protection Agency Air Resources Board Special Advisory

## Gasoline Dispensing Facility

VST Nozzle Daily Check

Number 418

May 28, 2010

## VST Nozzles

This advisory concerns all VST nozzles operating in California. In rare instances, a damaged VST nozzle can unexpectedly cause gasoline spray, upon activating the dispenser, prior to the nozzle being inserted into the vehicle fuel tank. The Air Resources Board (ARB) advises that all VST nozzles be **checked daily** by following the instructions included in **Form 1** of this Advisory. See Figure 1 for a diagram of the nozzle. Any nozzle which fails Check A or Check B, of **Form 1**, should be **removed immediately from service**.

**As a reminder,** for any hanging hardware components involved in a drive-off or subjected to customer abuse it is required that each individual component of the hanging hardware be **visually inspected and functionally tested** before the components can again be used for dispensing fuel. Prior to placing the component/s into service, use the appropriate equipment and follow the instructions specified in the Installation, Operation, and Maintenance Manual (IOM) Sections 10, 11 and 12 (as it relates to the latest revision of Executive Orders (EO) VR-203, VR-204 and VR-205) or IOM Sections 8, 9 and 10 (as it relates to the latest revision of EO VR-209).

## **Questions and Further Information:**

For questions regarding this advisory call at (916) 327-0900. For copies of the Executive Orders visit our website at:

- 1. http://www.arb.ca.gov/vapor/eos/eo-vr203/eo-vr203.htm
- 2. http://www.arb.ca.gov/vapor/eos/eo-vr204/eo-vr204.htm
- 3. http://www.arb.ca.gov/vapor/eos/eo-vr205/eo-vr205.htm
- 4. http://www.arb.ca.gov/vapor/eos/eo-vr209/eo-vr209.htm

FORM 1
Daily Inspection and Function Checklist – for VST Nozzles

Г	Fueling	Check A		Check B			Fueling	Check A		Check B	
L	Point #	Pass	Fail	Pass	Fail		Point #	Pass	Fail	Pass	Fail
Ļ											
┝											
⊢											
F											
F											
F											
_											
F											
L											
_											
L											
nspected by:				Date: _		Insp	pected by	:		Dat	e:
	,										
<u> </u>				liananaa							
·	1)	Make					ed ( <b>do not</b> cradle with			ne lever	
<u> </u>	1) 2) 3)	Make Lift the Make	e nozz sure h	le from Iold ope	the dis n clip i	spenser o is diseng	cradle with aged.	out touc	hing t		
·	1) 2)	Make Lift the Make Point	e nozz sure h nozzle	le from Iold ope spout i	the dis n clip i nto a g	spenser o is diseng	cradle with	out touc	hing t		
<u> </u>	1) 2) 3)	Make Lift the Make Point collec	e nozz sure h nozzle tion sle	le from old ope spout i eeve (V	the dis n clip i nto a g CS).	spenser o is diseng jasoline	cradle with aged.	out touc e contaii	hing t		
<u> </u>	1) 2) 3) 4)	Make Lift the Make Point collec Pull le If the	e nozz sure h nozzle tion sle ver to lever h	le from old ope spout i eeve (V make s nas <b>no</b> s	the dis n clip i nto a g CS). ure the pring t	spenser ( is diseng gasoline ere is no cension (	cradle with aged. compatible spring ten dead lever	out touc e contain sion. r), the no	ching the ner. D	o not co basses.	ompre
<u> </u>	1) 2) 3) 4)	Make Lift the Make Point collec Pull le If the	e nozz sure h nozzle tion sle ver to lever h	le from old ope spout i eeve (V make s nas <b>no</b> s	the dis n clip i nto a g CS). ure the pring t	spenser ( is diseng gasoline ere is no cension (	cradle with aged. compatible spring ten	out touc e contain sion. r), the no	ching the ner. D	o not co basses.	ompre
·	1) 2) 3) 4)	Make Lift the Point collec Pull le If the fails. If Che	e nozz sure h nozzle tion sle ver to lever h lever h	le from hold ope spout i eeve (V make s has <b>no</b> s has sprir ails, tag	the dis in clip i nto a g CS). ure the pring t ng tens out thi	spenser ( is diseng jasoline ere is no cension ( sion (live is Fuelin	cradle with aged. compatible spring ten dead lever lever i.e. s g Point an	out touc e contain sion. r), the no same as d have t	ching the ner. D ozzle p dispe he noz	o not co passes. nsing fu zzle imn	ompre iel), th nediat
<u> </u>	1) 2) 3) 4) 5)	Make Lift the Make Point collec Pull le If the If the fails. If Che servic	e nozz sure h nozzle tion sle ver to lever h lever h ck A fa ed or l	le from old ope spout i eeve (V make s nas <b>no</b> s nas sprir ails, tag replaced	the dis in clip i nto a g CS). ure the pring t ng tens out thi d. Refe	penser of is diseng jasoline ere is no ere is no erension ( sion (live is Fuelin erence n	cradle with aged. compatible spring ten dead lever lever i.e. s g Point and ozzle insta	out touc e contain sion. r), the no same as d have t allation o	ching the ner. D ozzle p dispe he noz or nozz	o not co basses. nsing fu zzle imn de repa	ompre iel), th nediat ir insti
·	1) 2) 3) 4) 5) 6)	Make Lift the Make Point collec Pull le If the If the fails. If Che servic the Af	e nozz sure h nozzle tion sle ver to lever h lever h ck A fa ed or n RB Ap	le from old ope spout i eeve (V make s nas <b>no</b> s nas sprir ails, tag replaced proved l	the dis in clip i nto a g CS). ure the pring t ng tens out thi d. Refe Installa	spenser of is diseng jasoline ere is no cension ( sion (live is Fuelin erence n ation, Op	cradle with laged. compatible spring ten dead lever lever i.e. s g Point and ozzle insta eration, ar	out touc e contain sion. r), the no same as d have t allation o	ching the ner. D ozzle p dispe he noz or nozz	o not co basses. nsing fu zzle imn de repa	ompre iel), th nediat ir insti
heck A	1) 2) 3) 4) 5) 6) 7)	Make Lift the Point collec Pull le If the I fails. If Che servic the Af If Che	e nozz sure h nozzle tion sle ver to lever h lever h ck A fa ed or i RB Apj ck A p	le from old ope spout i eeve (Vé make s nas <b>no</b> s nas sprir ails, tag replaced proved l asses, j	the dis n clip i nto a g CS). ure the pring t ng tens out thi d. Refu Installa procee	spenser of s diseng gasoline ere is no cension ( sion (live sion (live erence n ation, Op ed to Che	cradle with laged. compatible spring ten dead lever lever i.e. s g Point and ozzle insta eration, ar eck B.	out touc e contain sion. r), the no same as d have t allation o nd Maint	ching the ner. D ozzle p dispe he noz or nozz enanc	o not co passes. nsing fu zzle imn zle repa e Manu	ompre iel), th nediat ir insti als.
heck A	1) 2) 3) 4) 5) 6)	Make Lift the Point collec Pull le If the If the fails. If Che servic the AF If Che	e nozz sure h nozzle tion sle ver to lever h lever h ck A fa ed or n RB Ap ck A p	le from old ope spout i eeve (V make s nas <b>no</b> s nas sprir ails, tag replaced proved l asses,	the dis in clip i nto a g CS). ure the spring t out thi d. Refe Installa procee	spenser of is diseng jasoline ere is no tension ( sion (live is Fuelin erence n ation, Op ed to Che zle spou	cradle with laged. compatible spring ten dead lever lever i.e. s g Point and ozzle insta eration, ar eck B. t in the ga	out touc e contain sion. r), the no same as d have t allation o nd Maint soline c	ching the ner. D ozzle p dispe he noz or nozz renanc ompat	o not co passes. nsing fu zzle imn zle repa e Manu ible con	ompre iel), th nediat ir insti als. tainer
heck A	1) 2) 3) 4) 5) 6) 7)	Make Lift the Make Point collec Pull le If the I fails. If Che servic the AF If Che While the dis	e nozz sure h nozzle tion sle ver to lever h lever h ck A fa ed or n RB Ap ck A p still po spense	le from old ope spout i eeve (Ve make s nas <b>no</b> s nas sprir ails, tag replaced proved l basses, p binting the	the dis in clip i nto a g CS). ure the pring t spring t ng tens out thi d. Refe Installa procee he noz	spenser of is diseng jasoline ere is no rension ( sion (live erence n ation, Op ed to Che zle spou	cradle with laged. compatible spring ten dead lever lever i.e. s g Point and ozzle insta eration, ar eck B.	out touc e contain sion. r), the no same as d have t allation o nd Maint soline c por colle	ching the ner. D ozzle p dispe he noz or nozz enanc ompat ection s	o not co basses. nsing fu zzle imn zle repa e Manu ble con sleeve (	ompre nel), th nediat ir insti als. tainer VCS)
neck A	1) 2) 3) 4) 5) 6) 7) 1) 2)	Make Lift the Point collec Pull le If the I fails. If Che servic the Af If Che the dis pressi Then	e nozz sure h nozzle tion sle ver to lever h lever h ck A fa ed or n RB Ap ck A p still po spense ng on releas	le from iold ope spout i eeve (Ve make s nas <b>no</b> s nas sprir ails, tag replaced proved l basses, j binting the er de-ac the face e the VC	the dis in clip i nto a g CS). ure the pring t ng tens out thi d. Refe Installa procee he noz tivatec e seal, CS and	spenser of is diseng gasoline ere is no cension ( sion (live sion (live erence n ation, Op ed to Che zle spou d, compro and con d confirm	cradle with laged. compatible spring ten dead lever lever i.e. s g Point and ozzle insta eration, ar eck B. t in the ga ess the val firm the lever	out touc e contain sion. r), the no same as d have t allation o nd Maint soline c por colle ver has has <b>no</b>	ching the ner. D ozzle p dispe he nozz or nozz enanc ompat ection s spring spring	o not co passes. nsing fu zzle imn zle repa e Manu ble con sleeve ( tension tension	tainer VCS) (live (live (dead
neck A	1) 2) 3) 4) 5) 6) 7) 1)	Make Lift the Make Point collec Pull le If the If the fails. If Che servic the Af If Che While the dis pressi Then If leve	e nozz sure h nozzle tion sle ver to lever h lever h ck A fa ed or i RB Ap ck A p still po spense ng on releas r goes	le from iold ope spout i eeve (Vé make s nas <b>no</b> s nas sprir ails, tag replaced proved l basses, j binting tl er de-ac the face e the Vé i live (wi	the dis in clip i nto a g CS). ure the pring t out thi d. Refe installa procee he noz tivatece e seal, CS ano hen the	spenser of is diseng gasoline ere is no tension ( sion (live is Fuelin erence n ation, Op ed to Che zle spou d, compro and con d confirm e VCS is	cradle with laged. compatible spring ten dead lever lever i.e. s g Point and ozzle insta eration, ar eck B. t in the ga ess the val firm the lever compress	out touc e contain sion. r), the no same as d have t allation o nd Maint soline c por colle ver has has <b>no</b>	ching the ner. D ozzle p dispe he nozz or nozz enanc ompat ection s spring spring	o not co passes. nsing fu zzle imn zle repa e Manu ble con sleeve ( tension tension	tainer VCS) (live (live (dead
neck A	1) 2) 3) 4) 5) 6) 7) 1) 2)	Make Lift the Make Point collec Pull le If the I fails. If Che servic the AF If Che While the dis pressi Then If leve releas	e nozz sure h nozzle tion sle ver to lever h lever h ck A fa ed or n RB Ap ck A p still po spense ng on releas r goes ied), th	le from old ope spout i eeve (Ve make s nas <b>no</b> s nas sprir ails, tag replaced proved l basses,   basses,   basses,   basses,   basses,	the dis in clip i nto a g CS). ure the pring t ing tens out thi d. Refe installa procee the noz seal, CS and hen the nozzle	spenser of is diseng jasoline ere is no tension ( sion (live is Fuelin erence n ation, Op ed to Che zle spou d, compro and con d confirm e VCS is passes.	cradle with laged. compatible spring ten dead lever lever i.e. s g Point and ozzle insta eration, ar eck B. t in the ga ess the val firm the lever compress	out touc e contain sion. r), the no same as d have t allation o nd Maint soline c por colle ver has has <b>no</b> sed), and	ching the ner. D ozzle p dispe he nozz enanc ompat ection s spring spring d goes	o not co passes. nsing fu zzle imn de repa e Manu ble con sleeve ( tension dead (v	tainer VCS) (live (live (dead (dead (dead
·	1) 2) 3) 4) 5) 6) 7) 1) 2) 3) 4)	Make Lift the Point collec Pull le If the I fails. If Che servic the Af If Che the dis pressi Then If leve releas	e nozz sure h nozzle tion sle ver to lever h lever h ck A fa ed or n RB Ap ck A p still po spense ng on releas r goes sed), th r stays	le from old ope spout i eeve (Ve make s has <b>no</b> s has <b>no</b> s has sprir ails, tag replaced proved l basses, l binting the e the face e the VC hen the l s dead ( hen the l	the dis in clip i nto a g CS). ure the pring t ng tens out thi d. Refe Installa procee he noz tivatec e seal, CS and hen the nozzle when t	spenser of is diseng gasoline ere is no tension ( sion (live is Fueline erence n ation, Op ed to Che zle spou d, compro and con d confirm e VCS is passes. the VCS fails.	cradle with laged. compatible spring ten dead lever lever i.e. s g Point and ozzle insta eration, ar eck B. t in the ga ess the val firm the lever compress is compre	out touc e contain sion. r), the no same as d have t allation o nd Maint soline c por colle ver has has <b>no</b> sed), and ssed) <b>o</b>	ching the ner. D ozzle p dispe he nozz or nozz enance ompat ection s spring d goes r stays	o not co passes. nsing fu zzle imn zle repa e Manu ble con sleeve ( tension dead (v live (wl	tainer VCS) (live (live (dead when th
neck A	1) 2) 3) 4) 5) 6) 7) 1) 2) 3)	Make Lift the Make Point collec Pull le If the I fails. If Che servic the Af If Che the dis pressi Then If leve releas If leve releas	e nozz sure h nozzle tion sle ver to lever h lever h ck A fa ed or n RB Ap ck A p still po spense ng on releas r goes ied), th r stays ied), th	le from iold ope spout i eeve (Vé make s nas <b>no</b> s nas sprir ails, tag proved l passes, j pointing tl er de-ac the face e the Vé live (wh nen the j s dead ( nen the j is, tag	the dis in clip i nto a g CS). ure the pring t out this out this not the nozzle when the nozzle out this	penser of s diseng gasoline ere is no tension ( sion (live sion (live sis Fueling erence n ation, Op ed to Che zle spou d, compro and con d confirm e VCS is passes. the VCS fails. s Fueling	cradle with laged. compatible spring ten dead lever lever i.e. s g Point and ozzle insta eration, ar eck B. t in the ga ess the val firm the lever compress	out touc e contain sion. r), the no same as d have t allation o ha Maint soline c por colle ver has has <b>no</b> sed), and ssed) <b>o</b> I have th	ching the ner. D ozzle p dispe he nozz enanc ompat ection s spring d goes r stays ne nozz	o not co passes. nsing fu zzle imn zle repa e Manu ble con sleeve ( tension dead (v live (wl zle imm	tainer (live (live (live (dead when th ediate





